

BATTERY INFORMATION

- Lithium Batteries come with an in built electronic management system which protects the lithium battery from power surges or low voltage.
- The lithium battery will shut down/turn off when the charge has been depleted, indicating the battery is flat. Please re-charge the battery after use.
- Avoid letting the Battery get much too wet or immersed in water.
- Your battery should not be left uncharged for periods more than 3 months.
- Check with your Airline before attempting to transport by air as Lithium Batteries are listed as dangerous goods Class 9. UN3480 or UN3481

CHARGING PROCEDURE

- You can recharge your Battery after each use even if it's not discharged.
- Do not allow your Battery to run flat.
- USE ONLY the authorized E|Sonic Lithium Battery Charger supplied with your bike.
- DO NOT USE A LEAD ACID BATTERY CHARGER

TO CHARGE:

PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY.

- Connect the Charger plug to the Battery and THEN to a power point.
 - Our Batteries take approximately 5 to 7 hours to completely recharge.
 - The green light indicates the battery is fully charged.
 - Once the battery is fully charged turn the mains power off.
 - Next disconnect the battery from the charger.
 - The battery is now ready for use.
-
- We do not recommend leaving your Battery connected to the charger once the battery is fully charged.
 - Always ensure that the battery leads are connected to the charger correctly
 - Charge your Battery in a dry, non-carpeted area at temperatures between 50°C and 30°C.
 - Charging below 0°C can cause long term damage.

WARRANTY CONDITIONS

This warranty is given by E|Sonic for the Lithium Battery and Charger.

The warranty applies to the Lithium Battery & Charger identified by the serial number found on the Battery. The warranty is transferable to all owners of the Battery and Charger providing it is within the country of purchase during the Warranty period.

WARRANTY CONDITIONS CONTINUED

The warranty covers manufacturing defects that occur during normal use. Any breakage, damage or faults caused by the following items are not covered by the Warranty:

- Abuse, misuse or neglect as set out in the operating manual supplied with the products.
- Damage or fault caused to battery/ charger by a motor vehicle accident.
- Damage or fault caused by submerging in water.
- Use of the products after a defect is known.
- Damage or fault caused by chemicals, solvents, salt, fire etc.
- Installation or use of parts and accessories not supplied or approved by E|Sonic.
- Any repairs or alterations to the battery/charger carried out by anyone not authorized by E|Sonic
- Damage caused to battery/charger casings due to accidental related issues.
- Damage to battery or charger caused by overheating.
- Damage or fault due to products being stolen.
- Damage to battery by leaving it discharged for extended periods.
- Damage caused by use of the battery/charger outside of its intended purpose.
- The use of the battery/charger for commercial purposes and/or hire.
- Battery/Charger must be stored undercover out of the weather when not in use.
- ANY ATTEMPT to open the battery case will void the warranty.



The E|Sonic Lithium Battery and Charger are covered by a
2 YEAR WARRANTY from original date of purchase.



For Sales and Service please contact E|Sonic bikes

00 370 675 351 39

www.esonic.it

esonic@esonic.it

Thank you for choosing E|Sonic!